

AMBIRAD SPARES LIST

Mobile Radiant Heaters

Part No	Description	Tornado	Inthermo
200340	Rear ring handle (circle)	X	
200347	Torpedo handle	X	
200348	Wheel	X	
200349	Dome chrome cap to secure wheel	X	
200353	Gasket set	X	
200354	Wheel set	X	
200354-1	Metal ring	X	
200358	Burner head	X	
200358-SUBS	Complete burner head + mounting plate	X	
200417	Air diffuser ring	X	
200418	Ignition assembly	X	
200419	Burner head mesh	X	
200420	Jet carrier	X	
200421	Combustion fan	X	
200423	Transformer	X	
200433	Axial fan complete with basket	X	
200434	Burner head retention ring for mesh	X	
200437RAW	Triple lock flexible	X	
200457UK	Tornado inlet spinning assembly	X	
200466	Tornado outlet spinning assembly	X	
200480	Propane regulator	X	X
200483	"O" clip double ear	X	
200487	Vacuum switch	X	
200526	Remote thermostat socket	X	
200527	Double pole rocker switch	X	
200532	Mains appliance connector 110V	X	
200535	Mains appliance connector 230V	X	
200544	Handle	X	
201307	Adjustable low pressure switch	X	
900001	Overheat thermostat	X	
900049	Capacitor	X	
900050	Burner head wiring harness	X	
900066-3	Adjustable low gas pressure switch	X	
200533	Three position 110/OFF/230V switch	X	
200212	Spanner	X	
2015S	Ignition controller	X	X
2052S	Valve twin solenoid step reg 220/240V	X	X
2175	Amber neon (Burner ON)	X	
2180	Red neon (Mains ON)	X	
2289	Injector 4.6mm	X	
6148	Thermostat	X	
200209	Fulham hoze nozzle 1/2 BSPT x 10mm o/d	X	
200481	Fulham hoze nozzle 3/8 BSPT x 10mm o/d	X	
200482	Gas hose	X	
200410-SUB	Flue Adaptor	X	

AMBIRAD SPARES LIST

Mobile Radiant Heaters.....(continued)

Part No	Description	Tornado	Inthermo
200190	Combustion fan 3kg		X
200171	Convection fan 5kg		X
2273	Injector		X
3190	Burner chamber gasket		X
2190S	Pressure switch		X
200169	U-bend aluminised		X
200170	U-bend stainless steel		X
200482	Hose		X
200211	Clip		X
3175S	Electrode assembly		X
2243-1	HT Lead		X
2243-2	Rectification lead		X
2104	Relay	X	
2108	Base	X	
200436-SUB	Heat Exchanger	X	
200584	Ducted Flue Spigot	X	
200585	Ducted Air Spigot	X	